

Airtame Wireless Connection Instructions

Using the Airtame

- Download and install the Airtame app at <https://airtame.com/download/>
- Open the Airtame App
- Type the corresponding IP address from the TV into the Airtame App
- Select Share Screen

Troubleshooting sound on the Airtame

- Open the Airtame App
- Select “*Settings*” located below the name/ ip address of the Airtame you are connecting to.
- Scroll down and select “*Advanced Settings*”.
- Select “*Resolution*” from the dropdown box and choose an appropriate setting that matches your TV (1920 X 1080p @ 60hz (P) is preferred)

Using the TV in campus spaces

- Press input on the TV/ TV remote to switch between HDMI sources.
- Select HDMI 1 for the HDMI cable located in the wall.
- Select HDMI 2 for the wireless Airtame